


Determining hand of spur

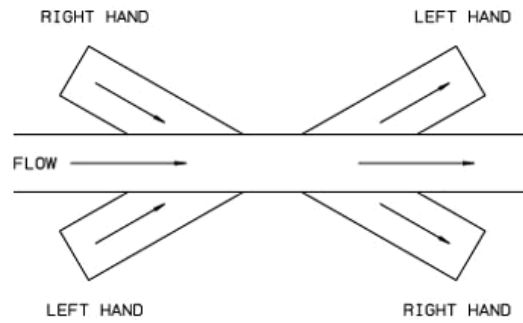

When placing an order for any spur, hand of spur must be determined and specified. The drawing above illustrates both left hand and right hand spurs. It is acceptable to converge at either 30° or 45°. However, on diverging spurs, it is most desirable to divert at 30°.